
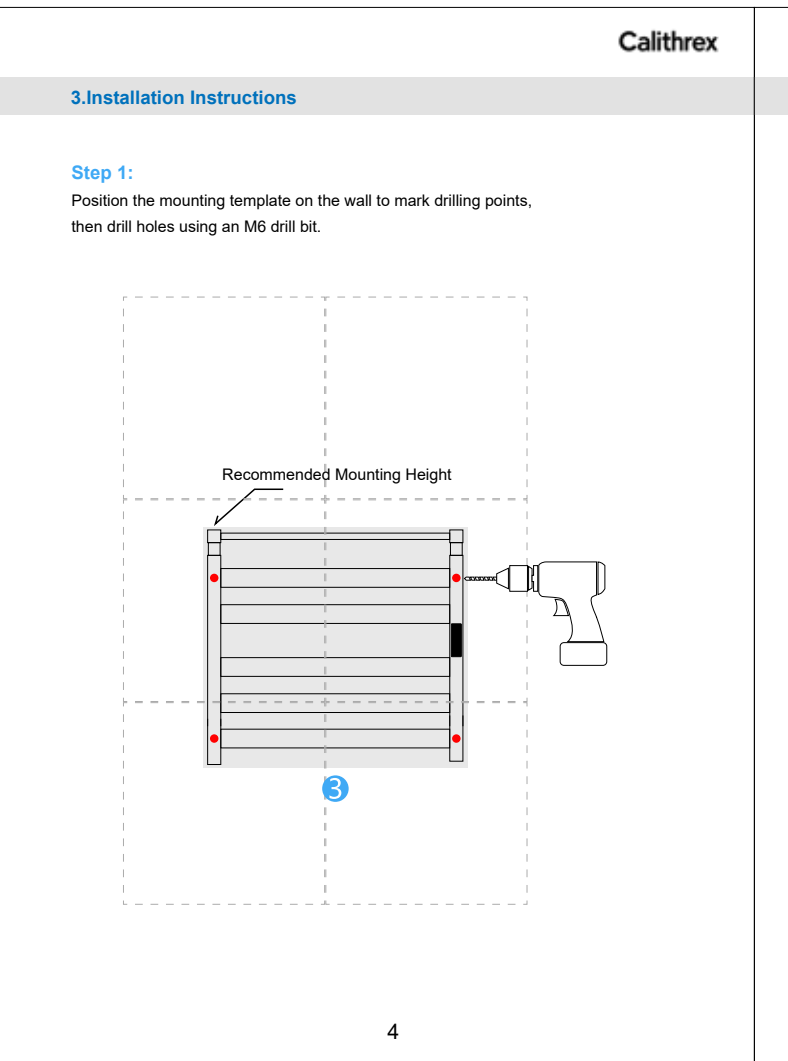
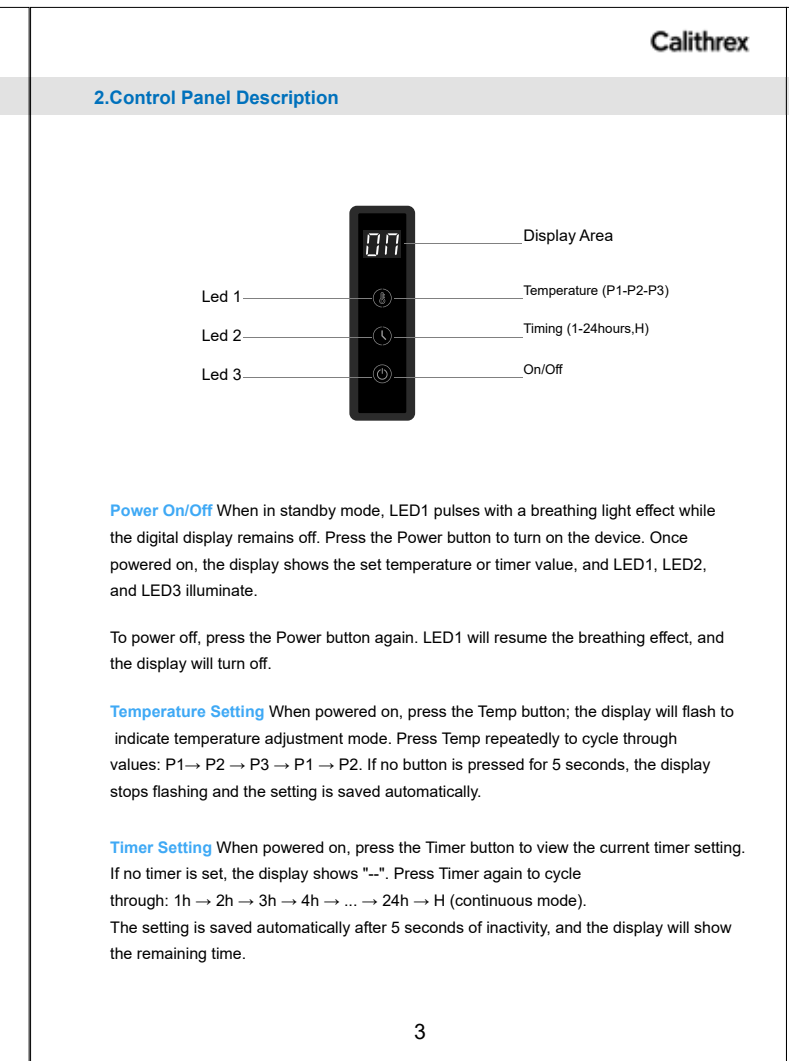
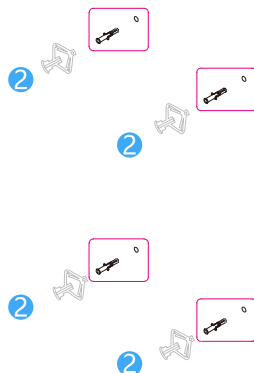




Table of Contents	
Important Safety Instructions	01
Packing List	02
Control Panel Description	03
Installation Instructions	04
Plug-in Installation	07
Hardwired Installation	08
Basic Parameters	09
After-Sales Service&Support	09
IMPORTANT SAFETY INSTRUCTIONS	
Safety in Use: Do not completely wrap the heated towel rack with bath towels or other fabrics for more than 8 hours, as this will block heat dissipation, affect product lifespan.	
 Maintain air circulation on both sides of the product	 The product is completely enclosed

- Calithrex
1. Packing List
- Wall Bracket
- 1 x4
-
- Expansion Screw Assembly
- 2 x4
-
- Installation Template
- 3 x1
-
- Instruction Manual
- 4 x1
-
- Connecting Rod for Wiring
- 5 x1
-
- Connecting Rod
- 6 x3
-
- Screw
- 7 x4 M4*70mm
-
- Screw
- 8 x6 M5*7mm
-
- Screwdriver
- 9 x1
-
- Power Plug
- 10 x1
-
- Top Storage Rack
- 11 x1
-
- 2

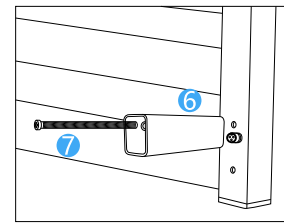

- ### 3. Installation Instructions
- Step 2:**
Insert expansion screws (2) or drywall anchors (2)
- 
- Step 3:**
Secure the Connecting Rod (6) to the main body using screw (7).
- 
- 5

- Calithrex
- ### 3.Installation Instructions
- #### Step 4:
- 1.Mount the wall brackets (1) to the wall using the screw assemblies (2).
 - 2.Insert the connecting rods (6) into the wall brackets (1).
 - 3.Secure the screws (8) into the brackets (1) using the screwdriver (9).
 - 4.Tighten or fix the connecting rods (6) in place.
-
- #### Step 5:
- 1.Determine the power cord exit direction for the heated towel rack(bottom left or bottom right),
 - 2.then thread the power cord (10)through the Connecting Rod for Wiring (5),
 - 3.insert the plug into the port and rotate to secure.
-
-
- 6

- Calithrex
- ### 3. Installation Instructions
- #### Step 6:
1. Insert the heating rack (11) into the main unit,
 2. then secure it by tightening the screws (8) with the screwdriver (9).
-
- #### *Step 7: (Plug-in installation)
1. Mount the wall brackets (1) to the wall using the screw assemblies (2).
 2. Insert the Connecting Rod for Wiring (5) into the wall brackets (1).
 3. Secure the screws (8) into the brackets (1) using the screwdriver (9).
 4. Tighten or fix the Connecting Rod for Wiring (5) in place.
-
- 7

- ### 3. Installation Instructions
- *Step 8: (Hardwired Installation)**
1. Cutting the power cord (must be performed by a qualified electrician only) .
 2. Mount the wall brackets (1) to the wall using the screw assemblies (2).
 3. Connect to the power supply wire reserved in the wall
 4. Insert the Connecting Rod for Wiring (5) into the wall brackets (1).
 5. Secure the screws (8) into the brackets (1) using the screwdriver (9).
 6. Tighten or fix the Connecting Rod for Wiring (5) in place.
-
- ### 4. Product Overview
-
- 21.65 in
- The top storage rack does not heat
- 19.68 in
- Main body heats
- 8

- | | |
|-----------------------------|--|
| <h2>5.Basic Parameters</h2> | <div>  </div> <div> <h3>EA7 Series</h3> <h4>Electric heated Towel Rack</h4> </div> <div> <ul style="list-style-type: none"> MODEL
EA7-500X550 POWER RATING
100W INPUT VOLTAGE
AC 110V DRYING RANGE
P1/P2/P3
(104°/122°/140°F) COLOR
Multiple Options WATERPROOF GRADE
IPX4 This product comes with a one-year product warranty
<small>Except damage caused by human factors</small> </div> <hr/> <h2>6.After-Sales Service & Support</h2> <div>  <p>Installation&After-Sales Service</p> </div> <div> <h3>If you need any support</h3> <h4>Where to Find Us:</h4> <ol style="list-style-type: none"> Scan the QR code in the instruction manual Scan the QR code on the product side Contact us directly via email at service@calithrex.com </div> <hr/> <div> <p>15 years dedicated to electric heated towel racks</p> <p>9</p> </div> |
|-----------------------------|--|