


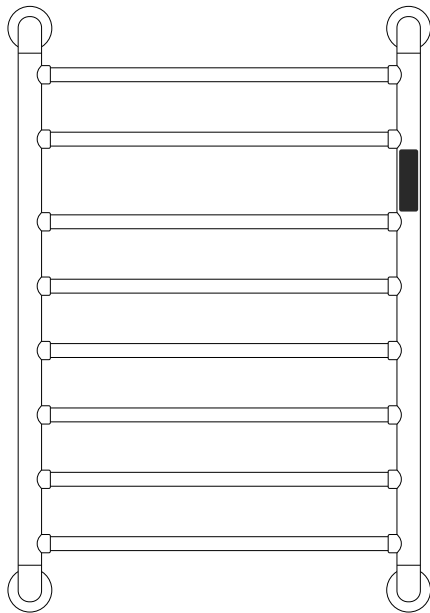

Product Model
ES17



Installation&After-Sales Service

Table of Contents

Important Safety Instructions	01
Packing List	02
Control Panel Description	03
Installation Instructions	04
Plug-in Installation	07
Hardwired Installation	07
Basic Parameters	08
After-Sales Service & Support	09

IMPORTANT SAFETY INSTRUCTIONS

Safety in Use: Do not completely wrap the heated towel rack with bath towels or other fabrics for more than 8 hours, as this will block heat dissipation, affect product lifespan.






Maintain air circulation on both sides of the product



The product is completely covered.


1

1.Packing List

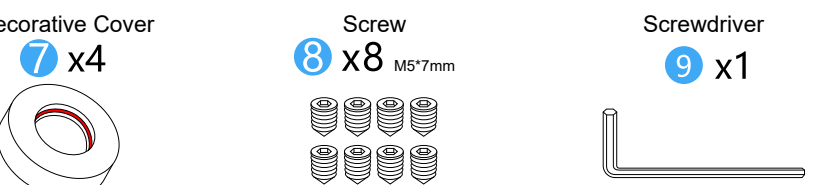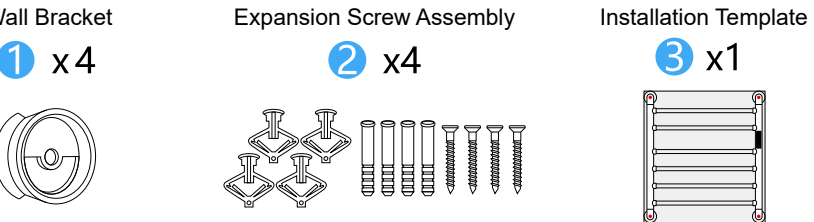

2

2.Control Panel Description

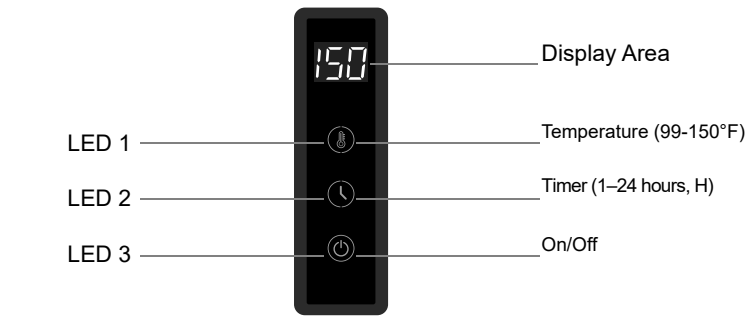

Power On/Off When in standby mode, LED1 pulses with a breathing light effect while the digital display remains off. Press the Power button to turn on the device. Once powered on, the display shows the set temperature or timer value, and LED1, LED2, and LED3 illuminate.

To power off, press the Power button again. LED1 will resume the breathing effect, and the display will turn off.


Temperature Setting When powered on, press the Temp button; the display will flash to indicate temperature adjustment mode. Press Temp repeatedly to cycle through values: 99 → 102 → ... → 150 → 99. If no button is pressed for 5 seconds, the display stops flashing and the setting is saved automatically.

Timer Setting When powered on, press the Timer button to view the current timer setting. If no timer is set, the display shows "-:--". Press Timer again to cycle through: 1h → 2h → 3h → 4h → → 24h → H (continuous mode). The setting is saved automatically after 5 seconds of inactivity, and the display will show the remaining time.

3

3.Installation Instructions


Step 1:
Position the mounting template on the wall to mark the drilling points, then drill the holes using an M6 drill bit.

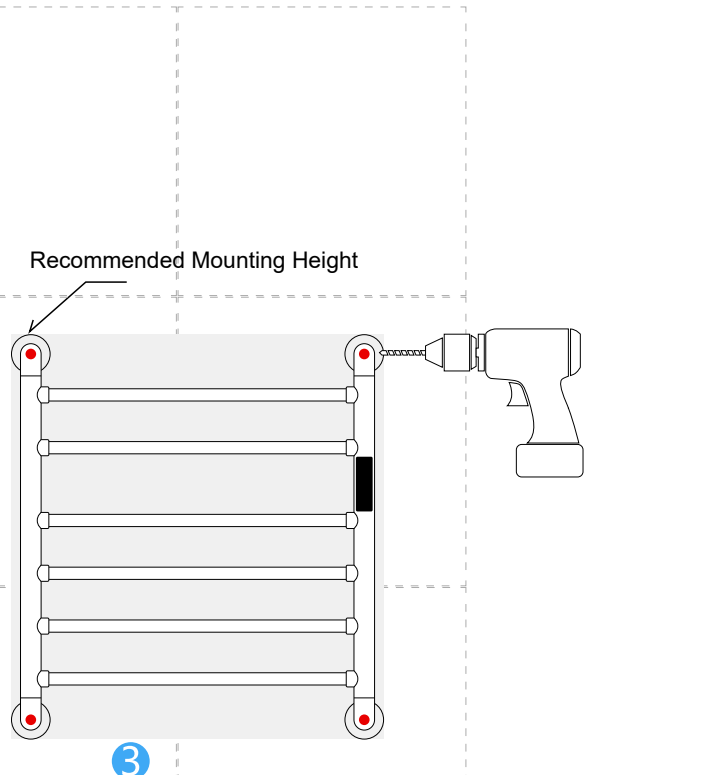


4

3.Installation Instructions

Step 2:
Insert expansion screws (2) or drywall anchors (2)

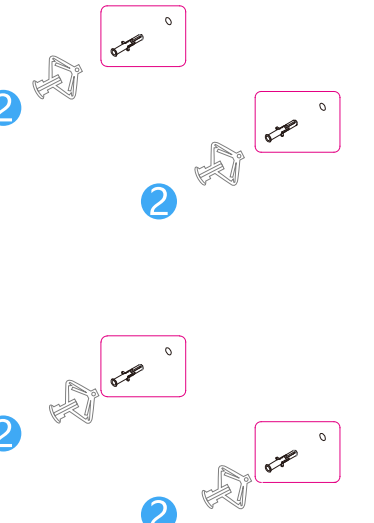


Step 3:
Secure the screws (8) into the Connecting Rod (6) using the screwdriver (9).

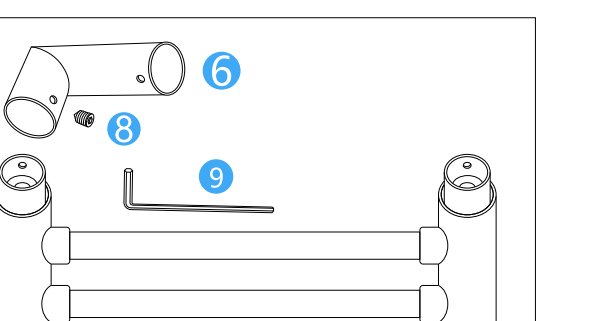


5

3.Installation Instructions

Step 4:
1.Determine the power cord exit direction for the heated towel rack (bottom left or bottom right).
2.Then thread the power cord (10) through the connecting rod for wiring (5).
3. Insert the plug into the port and rotate it to secure it.
4. Secure the screws (8) into the connecting rod (5) using the screwdriver (9).

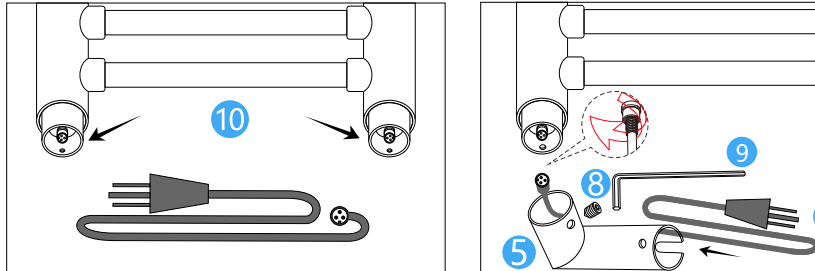


Step 5:
1.Mount the wall brackets (1) to the wall using the screw assemblies (2).
2. Insert the connecting rods (5 and 6) into the wall brackets (1).
3.Slide part (7) over the connecting rod (5 or 6).
4.Secure the screws (8) into the brackets (1) using the screwdriver (9).
5.Tighten and secure the connecting rods (5 or 6) in place.
6.Press part (7) down to the bottom and attach it to the wall.

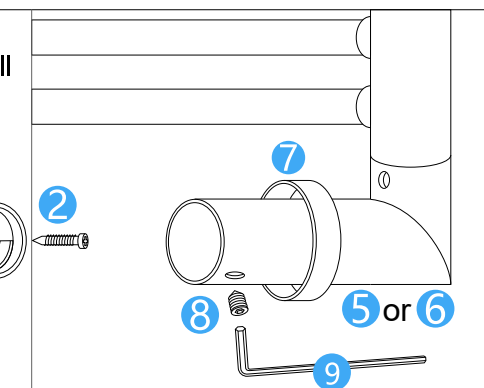


6

3.Installation Instructions

***Step 6:(Plug-in installation)**
1.Mount the wall brackets (1) to the wall using the screw assemblies (2).
2.Insert the connecting rod for wiring (5) into the wall brackets (1).
3.Secure the screws (8) into the brackets (1) using the screwdriver (9).
4.Tighten and secure the connecting rod for wiring (5) in place.


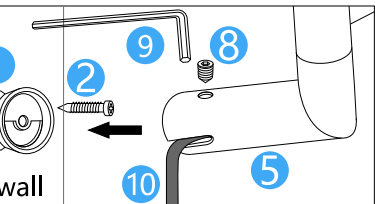


***Step 7:(Hardwired Installation)**
1.Cut the power cord. This must be performed by a qualified electrician only.
2.Mount the wall brackets (1) to the wall using the screw assemblies (2).
3.Connect the power supply wire reserved in the wall.
4.Insert the connecting rod for wiring (5) into the wall brackets (1).
5.Secure the screws (8) into the brackets (1) using the screwdriver (9).
6.Tighten and secure the connecting rod for wiring (5) in place.
7.Install part (11) onto the opening of part (5).

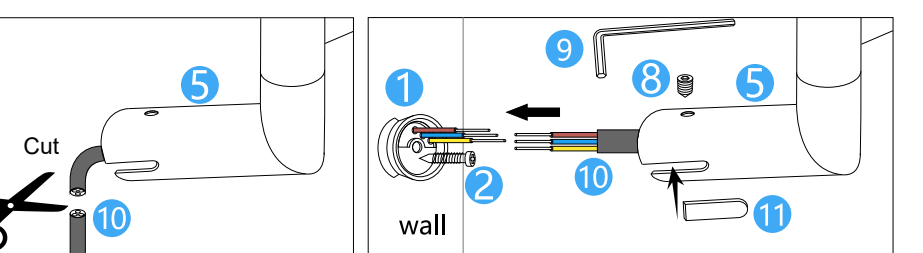

7

4.Product Overview

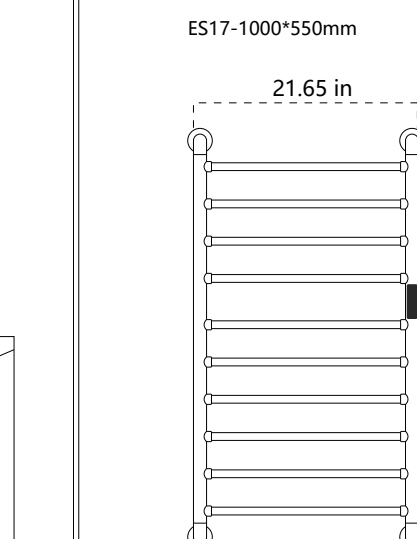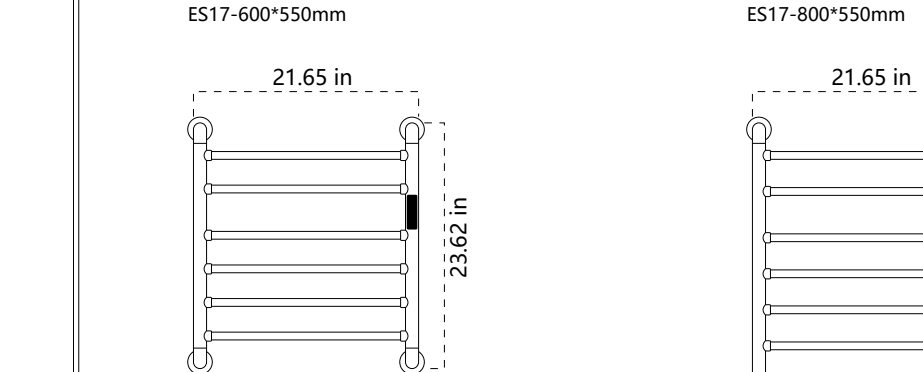

8

5.Basic Parameters

ES17 Series
Electric heated Towel Rack

MODEL: EA17 600*550mm
EA17 800*550mm
EA17 1000*550mm

POWER RATING:
90w /120w /150w

INPUT VOLTAGE:
AC 110V


DRYING RANGE:
99-150°F

COLOUR:
Multiple Options

WATERPROOF GRADE:
IPX4

This product comes with a one-year product warranty
Except: damage caused by human factors.

6.After-Sales Service & Support

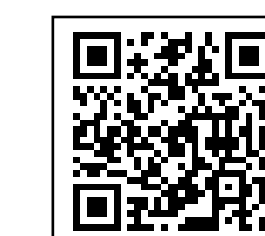

Installation&After-Sales Service

If you need any support
Where to Find Us:

- Scan the QR code in the instruction manual
- Scan the QR code on the product side
- Contact us directly via email at service@calithrex.com

15 years dedicated to electric heated towel racks

9